



Organo-MS
by oceamo

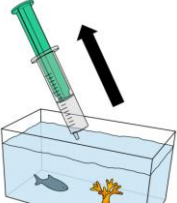




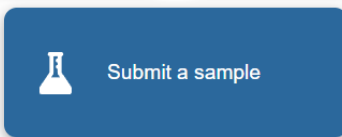

Thanks for choosing Oceamo!



Proper sampling is a crucial part of analysis and significantly contributes to the reliability of the results.

Please read the instructions carefully and follow them precisely. If the sampling is done incorrectly, certain values may not be measurable, or the results could be distorted.

Sampling:

 <p>1. Rinse the included 20 ml syringe several times with aquarium water, then fill it completely with aquarium water.</p>	 <p>2. Attach the included filter to the syringe.</p> <p>Flush the filter by slowly pushing the plunger until exactly 13 ml of sample remain in the syringe.</p>	 <p>3. Open the sample bottle and fill it with these 13 ml of filtered sample.</p>	 <p>4. Open the small blue capped vial containing the stabilizer and pour the entire contents into the sample bottle.</p> <p>Then close the sample bottle tightly. Mix by light shaking.</p>
 <p>5. Store the sample in a cool place (e.g., in the refrigerator) until it is ready for shipping.</p>	 <p>6. Log in to www.oceamo-portal.com (if you don't have an account yet, please register) and submit your sample.</p> <p>You will receive a confirmation email. Make sure you have received the confirmation.</p>	 <p>7. Pack the vial securely and send it to us:</p> <p><i>Oceamo e.U. Schulstraße 5 3200 Ober-Grafendorf Austria</i></p> <p>Or to your local sample collection hub</p>	<p>You will be notified as soon as your sample arrives and once your analysis results are ready! If you have any questions, feel free to contact us:</p> <p>office@oceamo.at +43 (0) 650 2209329</p>